

PERFECT APPLIQUÉ™

Lightweight Fusible Web

Permanently fuse virtually any fabric in seconds while maintaining the fabric hand.



No Steam Required
Acid Free

®
**S
U
L
K
Y**

CREATE WITH CONFIDENCE

Makes fusing appliqué projects with few or many layers a breeze. Needles glide through effortlessly for unparalleled sewability.

GREAT FOR


- Appliqué
- Hem Facings
- Pattern Pieces & Templates
- In-the-Hoop Appliqué
- Eliminates Pinning or Basting

ITEM NO. 669-01


WEIGHT: **Light** COLOR: **Translucent** SIZE: **18" x 36"** Instructions included

INSTRUCTIONS FOR USE


1. If desired, prewash fabrics in the same manner as the finished project. Don't use fabric softeners, and dry according to the fabric care requirements. Test the fusible on the intended fabric prior to using on the finished piece to ensure desired results.
2. Set the iron to medium heat without steam. An iron that's too cool will not fuse the product; conversely, an iron that's too hot will disperse too much fusing agent and not fuse properly. A too-hot iron could also result in scorching the fabric and/or fusible. Make sure the fabric can withstand the heat from the iron.
3. Place the fabric intended for fusing wrong side up on a protected work surface, such as a pressing mat or ironing board. Place the fusible bumpy side down over the fabric's wrong side. Using a press cloth (optional), place the iron on the fusible and press without moving the iron for 2-3 seconds. Lift up the iron and re-place it in an up-and-down motion to continue fusing the product to the fabric. Do not iron the fabric to fuse it (meaning swiping the iron back and forth across the paper surface), as this could result in unwanted fabric stretching, puckers and/or bubbles.

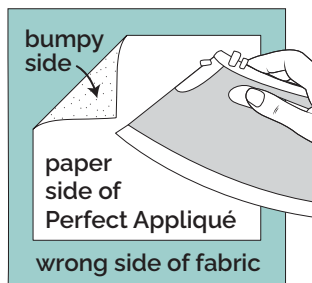

4. Once the fabric is fused, cut out shapes for appliqués, strips for hem facings, or pattern pieces as desired.

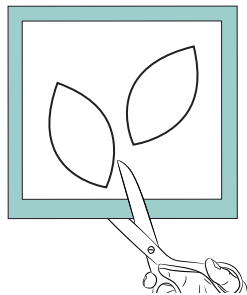

5. Place the base fabric on the protected work surface with the right side facing up. Remove the paper backing from the fused fabric piece(s). Position the fused fabric(s) right side up where desired on the base fabric. Once perfect placement is achieved, place the iron over the fused fabric for approximately 6-8 seconds until fusing is complete. Do not iron back and forth over the fabric; press as previously directed.

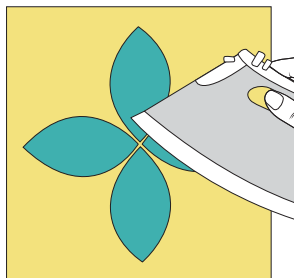

TIP: Use a press cloth to ensure no fusible agent touches the iron surface. If this does occur, use an iron cleaner to carefully remove the fusible once the iron has cooled.

DESIGN HINTS

1. Draw on the paper side of the SULKY PERFECT APPLIQUÉ to create your own shapes, strips or designs to cut out after the first fuse.
2. Use cookie cutters as appliqué templates and trace inside the cutter onto the paper side of the fusible to create fun design combinations.
3. Use SULKY PERFECT APPLIQUÉ for in-the-hoop appliqués to help contain raw fabric edges and stabilize the project over time.

PERFECT APPLIQUÉ™ SULKY®

Lightweight Fusible Web

Achieve appliqué perfection with this high-quality, lightweight, paper-backed fusible web. It's double-sided to adhere fabric layers quickly and easily with moderate heat from an iron. The lightweight fusible provides a permanent bond without changing the fabric hand, creating soft, smooth, flexible projects. Use it for all of your appliqué needs; to secure hems, facings and linings; for embellishing quilts, in-the-hoop projects and more.

Choosing the correct stabilizer for your project has never been easier. Scan for the Sulky Stabilizer Selector Tool.

For creative inspiration and online education visit sewingonline.sulky.com.



Perfect Appliqué is also available on a:

- 18" x 3 yd roll - Item #669-18
- 18" x 25 yd bolt - Item #669-25

Sulky of America
980 Cobb Place Blvd., Suite 130
Kennesaw, GA 30144

Country of Origin: JAPAN
Converted and packaged in USA

